

## PRIMING OF A JET PUMP



1. You may need to prime your jet pump if your water pressure dropped because of power failure, using a volume of water quickly or running out of water. This happens when the jet pump sucks air instead of water.
2. Shut the pump off using the on/off switch on wall/breaker, or unplug from the wall.
3. Shut off the water valve to house.
4. Unscrew cap on top of pump and fill with water until it gets to the top of hole.
5. Put cap back.
6. Turn pump on.
7. Wait until the pressure comes up. When fully pressurized, it will shut off on its own.
8. These steps may need to be repeated 7 or 8 times.